


DROP GUARD

Product reference 70200306




INSTALLATION MANUAL

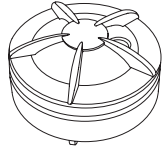

Version 1.1




01

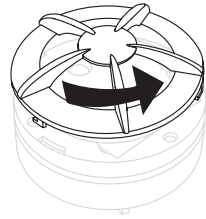


- | | |
|-----------------|----------------------|
| Open the cover | Abdeckung öffnen |
| Open het deksel | Ouvrir la couverture |
| Öppna locket | Otevřete kryt |
| Otvorte kryt | Deschideți capacul |

02

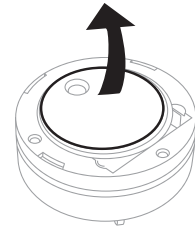


- | | |
|------------------|----------------------|
| Remove cover | Deckel entfernen |
| Verwijder deksel | Retirer le couvercle |
| Ta bort locket | Odstraňte kryt |
| Odstráňte kryt | Scoateți capacul |

03

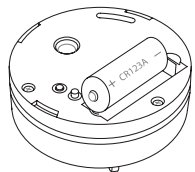

- | | |
|---------------------|-----------------------|
| Insert the battery | Batterie einsetzen |
| Insérer la batterie | Plaats de batterij in |
| Sätt i batteriet | Vložte baterii |
| Vložte batériu | Introduceți bateria |

04

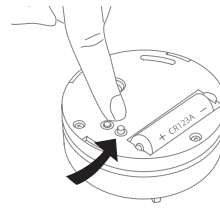


- | | |
|--|--|
| Test the alarm • Test message about ZigBee | Alarm testen • Testnachricht über ZigBee |
| Tester l'alarme • Message de test sur ZigBee | Test het alarm • Testbericht over ZigBee |
| Testa larmet • Testmeddelande om ZigBee | Otestujte budík • Testovací zpráva o ZigBee |
| Otestujte budík • Testovacie hlásenie o ZigBee | Testați alarma • Mesaj de test despre ZigBee |

05



- | | |
|------------------|--------------------|
| Close the sensor | Sensor schließen |
| Sluit de sensor | Fermer le capteur |
| Stäng sensorn | Zavřete snímač |
| Zatvorte snímač | Închideți senzorul |

06

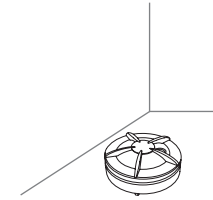

ALARM MODE


- | | |
|---|--|
| When water is detected, the alarm will sound | Wenn Wasser erkannt wird, ertönt der Alarm |
| Lorsque l'eau est détectée, l'alarme se déclenche | Als er water is gedetecteerd, klinkt het alarm |
| När detekteras vatten, ljuder larmet | Když je detekována voda, ozve se alarm |
| Keď je zistená voda, zaznie zvuk | Când se detectează apă, va suna alarma |

- | | |
|---|--|
| Press the plate between the arches on the top of the alarm to confirm and stop the siren. | Drücke die Platte zwischen den Bögen auf der Oberseite des Alarms, um die Sirene zu bestätigen und zu stoppen. |
| Appuyer sur la plaque entre les arcs sur le dessus de l'alarme pour confirmer et arrêter la sirène. | Tryck på plattan mellan bågen på toppen av larmet för att bekräfta och stoppa sirenen. |
| Stiskněte desku mezi oblouky v horní části alarmu a potvrďte a vypněte sirénu. | Stlačte dosku medzi oblúkmi v hornej časti budíka, aby sa potvrdila a zastavila siréna. |
| Apăsați placa între arce de pe partea superioară a alarmei pentru a confirma și opri sirena. | |




RESETTING




 Press the reset button until the LED lights up


 Reset-Knopf drücken, bis die LED leuchtet


 Maintenir le bouton Reset enfoncé jusqu'à l'allumage du voyant lumineux

 Druk op de reset knop tot de LED brandt

 Tryck på återställningsknappen tills LED lyser

 Stiskněte resetovací tlačítko, dokud se nerozsvítí LED

 Stlačte resetovacie tlačidlo, kým sa nerozsvieti LED

 Apăsați butonul de resetare până când LED-ul se aprinde



LEAD energy AG
Zollhof 30
40221 Düsseldorf

info@lead-energy.com
www.lead-energy.com